 



Smart Touch

touch screen keypad Quick Reference Card

The Quick Reference Card provides an overview of your spa's main functions and the operations accessible from your digital keypad. This QRC depicts a generic overlay, custom versions may vary.

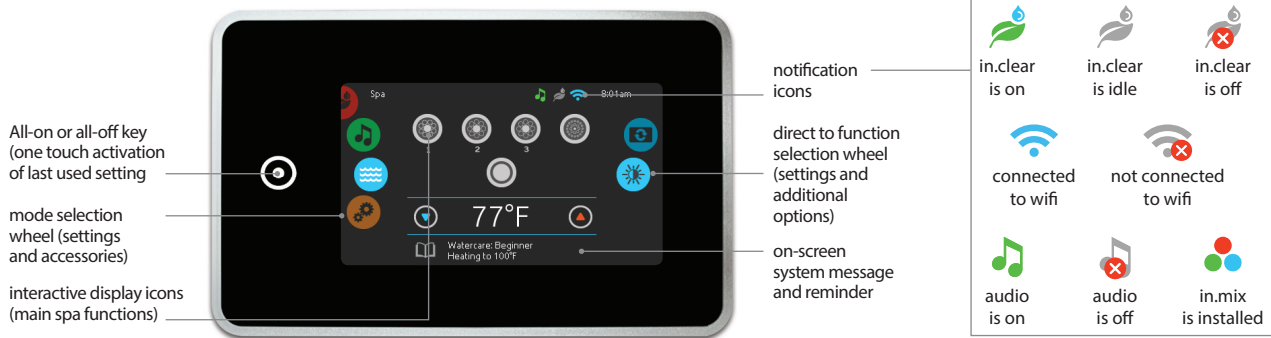


 MAIN MENU

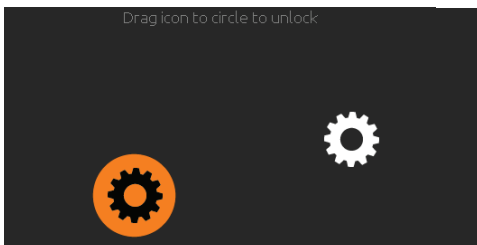

TURN KEYPAD ON

 Touch the screen to turn on the keypad. Then follow the instructions on the screen to access the main screen. (3 minutes after the last pump is turned off, the screen will shut off if there is no touch activity.)

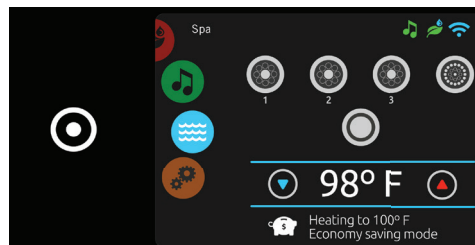

ALL-ON, ALL-OFF TARGET KEY

 
Wellis Smart Touch features an all-on or all-off one touch activation key of last used settings that, when pressed, stops or starts all working components and accessories at once.

From the home page you can access the following modes:

- color (with in.mix installed)
- sanitization (with in.clear connected)
- audio (with Aquasoul Pro connected)
- spa
- settings

To select a mode, slide the left wheel up or down until the desired icon menu is highlighted in the middle.

SPA MODE

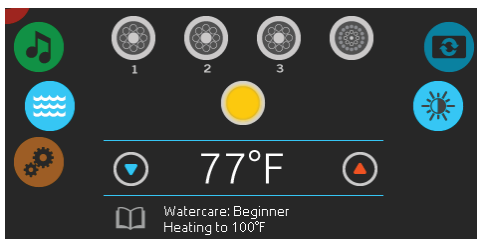

The home page will be displayed equipment start/stop keys, up and down buttons, water temperature, and messages.

START OR STOP ACCESSORIES

To start or stop an accessory (pump, blower, light), touch the associated icon. Icons will become animated when their accessory is turned on.

When an accessory has more than two speeds press the button until it reaches the desired speed.

WATER TEMPERATURE

At the bottom of the screen shows the current water temperature is shown. Use the Up and Down icon to set the desired temperature. The set point will appear in blue. After 3 seconds without any change, the current water temperature will reappear.

When the set value is lower than the current temperature Cooling to xx.x will appear below. When the set value is higher than the current temperature, Heating to xx.x will be indicated under the value. Normally there is a short delay before the heating starts, during which Heating Suspended is indicated under the value.

- DISPLAY ORIENTATION** Simply touch the line of the orientation you want to select.
- DISPLAY CONTRAST** Simply touch the line of the contrast you want to select.

SETTINGS MODE

WATER CARE

The Water care page will help you set up your ideal filtration and heating settings. Choose, set or modify one of the 5 suggested modes depending on your needs at any given time.

MODIFYING WATER CARE SCHEDULES

To modify a Water care category, touch the pen icon at the right end of the desired water care to open the selected Water Care menu.

ECONOMY

Touch the Economy tab to change the economy schedule. You can add economy schedules by touching the « + » symbol. To delete a schedule, touch the garbage can icon at the right end of the desired line.

AWAY FROM HOME	BEGINNER	ENERGY SAVINGS	SUPER ENERGY	WEEKENDER
In this mode the spa will always be in economy; the set point will be reduced by 20° F.	The spa will never be in economy mode and will be filtering according to the pack's low level configuration.	The spa will be in economy mode during the peak hours of the day and resume normal mode on the weekend.	The spa will always be in economy mode during peak hours, every day of the week.	The spa will be in economy mode from Monday to Friday, and will run normally on the weekend.

FILTER CYCLES

Touch the Filter cycle tab to change the filter cycle schedules. You can add filtration schedules by touching the « + » symbol. To delete a schedule, touch the garbage can icon at the right end of the desired line.

You have several possibilities for the schedule. The schedules will be repeated every week. The time and duration are set in 30 minute increments.

Once you have set the schedule, use the calendar icon to go back.

PURGES

Touch the Purge tab to change the purge settings. You can add purges by touching the « + » symbol.

To delete a schedule, touch the garbage can icon at the right end of the desired line.

MAINTENANCE

From the Maintenance page you can access the following:

- Error log
- Reminders.

DATE AND TIME

Simply touch the line of the item you want to change. Swipe up and down the column you want to change, and select the desired value. When done, touch the calendar icon at the right of the screen.

KEYPAD SETTINGS

In this page you can select between F° or C° temperature units and change display orientation, contrast and language.

ELECTRICAL CONFIGURATION

Please do not make changes in this section unless you are a qualified electrician.

ABOUT

Information about Smart Touch software number and the revision numbers of the different components of your system will be displayed.

WIFI

(Only if an in.touch module is connected to your system.) The available networks appears on the screen, as well as their signal strength. Selected network will be identified by a green check mark.

If the wifi network is password protected, enter it when keyboard prompts. Use Enter key to validate the password.

If no password is required the in.touch will connect automatically.

If the in.touch module of your spa system is not connected, **in.touch module not connected** message will be displayed.

AUDIO MODE

(only available if the system detects a connected Aquasoul Pro audio station)

ON/OFF

Press the audio icon at the center of the screen to turn Aquasoul Pro on/off.



MAIN DISPLAY

Press Play / Pause to start or pause playback of audio files. Drag the volume slider to adjust the volume or tap the mute button to mute or unmute sound. Press the last track or next track buttons to go to the previous song or skip to the next.

SPEAKER CALIBRATION

You can calibrate: • balance • fade • subwoofer. Use the sliders to calibrate the speakers at the desired level. The fade and subwoofer sliders will only appear on the screen if the corresponding speakers are installed on Aquasoul Pro.

SRC AUDIO SOURCE SELECTOR

In the menu list, the following sources are available: • Bluetooth • FM • USB • Aux. 1. Simply select the desired one to use. Note that only the sources installed on Aquasoul Pro will be displayed in the source menu. Please note that the Play/Pause and Change Track functions apply to devices using Bluetooth technology and USB, and will not work when AUX is selected as the source.

BLUETOOTH PAIRING

If you are using a device with Bluetooth technology, it must be connected for functions to work.

Slide the right wheel until the bluetooth icon is highlighted in the middle. Then follow the instructions displayed on the screen.

If a device with Bluetooth technology is connected to Aquasoul Pro, you can disconnect it by pressing the Disconnect button at the bottom of the screen. Doing so will also prevent Aquasoul Pro from automatically reconnecting to this specific device until it has been reconnected using the device itself.

SANITIZATION MODE

(only available if the system detects a connected in.clear water sanitization system)

ON/OFF

Slide the right wheel until the power on/off icon is highlighted in the middle. Press the in.clear icon to turn in.clear on.



BROMICHARGE™ LEVEL



BromiCharge™ gauge indicates the approximate sodium bromide level of the spa water. There is no need to add sodium bromide if the indicator is in the green zone.

When adding sodium bromide, the gauge indicator will gradually shift to the right. When adding clean water to the spa, the indicator will shift to the left. In order to achieve the proper level, start pumps and add 227g (.5 lb) of BromiCharge™ at a time and always allow 5 minutes for the gauge to react before adding more sodium bromide.

BOOST LEVEL

Boost mode is activated automatically 5 minutes after starting a pump. Boost mode increases the bromine generation rate to keep the water clear, clean and soft. As a rule of thumb, its level correspond to the number of bathers.

Use the up or down arrow keys to adjust the level.

MAINTENANCE LEVEL

The recommended maintenance level is 12. Use a test kit to check the bromine level. It should be between 3-5 ppm.

Use the up or down arrow keys to adjust the level.

If you do, retest the bromine level the day after.
- If the bromine is not in the 3-5 range and is higher than 5 ppm, decrease the maintenance level. If the bromine is lower than 3 ppm, increase it. Repeat until the test reads a bromine level in the 3-5 range.
- If the bromine level stays within that range for 3 consecutive days, your maintenance level is well adjusted.

COLOR MODE

(only available if the in.mix is detected among the spa accessories)

CHANGING COLORS

 
Once a zone has been selected, use the color wheel to choose the desired color, or the rainbow icon to get changing colors.

SYNCHRONIZING ZONES

The synchronization/desynchronization icon allows you to match the color of the selected zone with the other zones.

INTENSITY

Located at the bottom of the screen, the slider allows you to modify the intensity of the color.

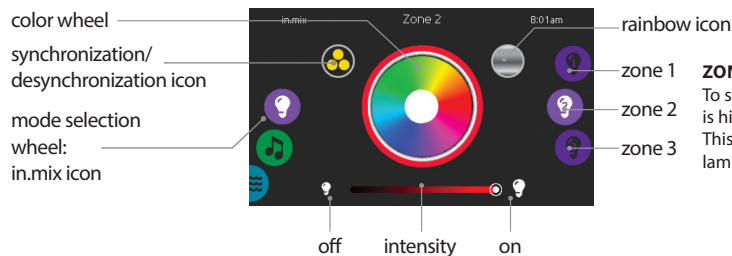

ZONE SELECTION

To select a zone, turn the right wheel until the desired icon is highlighted in the middle. This selection allows you to modify the color of the LED lamps in the zone.